mpman

For Model No.
MID7C

EN

User Manual

This manual contains important safety precautions and information of correct use. Please be sure to read this manual carefully before use so as to avoid any accidents.

Do not place the product in hot, wet or dusty environment, especially in summer, do not leave the product inside a car with all windows closed.
Avoid dropping, impacting or shaking the product violently, otherwise it may cause damages or malfunctions.
Select a proper volume to avoid ear problem when using earphones.
Do not cross the road or drive vehicles, using headphones to avoid traffic accidents.
Be sure to use the provided chargers and accessories in the package.
Be sure to charge the product when the following situations take place,
- The battery icon shows lower or empty.
- System automatically shut down and it turns off soon after restart.
- Operation keys do not respond properly.
- The device shows on the top right corner.

specification

Hardware

7.0" High Definition TFT LCD Touch Screen (800x480 pixel)
Capacitive multi-touch (2 touch) point function
CPU: Telechips TCC8902 ARM processor
RAM : DDR2 256MB (3D accelerator possible for 3D games)
Wi-Fi (IEEE802.11 b/g/n) for internet connection
HDMI port for TV-out (1080p output support)
USB host for OTG function
G-sensor
Micro SD card slot recognizing up to 32GB
Built-in speaker & Built-in MIC
5V DC power adapter
Compatible with keyboard, mouse
Dimension : 124 x 192 x 12.8mm

Software

Andriod 2.3 Ginger Bread
Google browser
Wi-Fi connection
e-Book function (all e-book formats supported by application)
1080p HD file playback
VoIP phone function with Wi-Fi connection
Possible to view/edit MS office files by application
Video: AVI, RM/ RMVB, FLV, MPG4 – 1, MPEG – 2 etc.
Audio: MP3, WMA, AAC, WAV ect.
Photo: JPEG, BMP, GIF, PNG, TIFF

Name

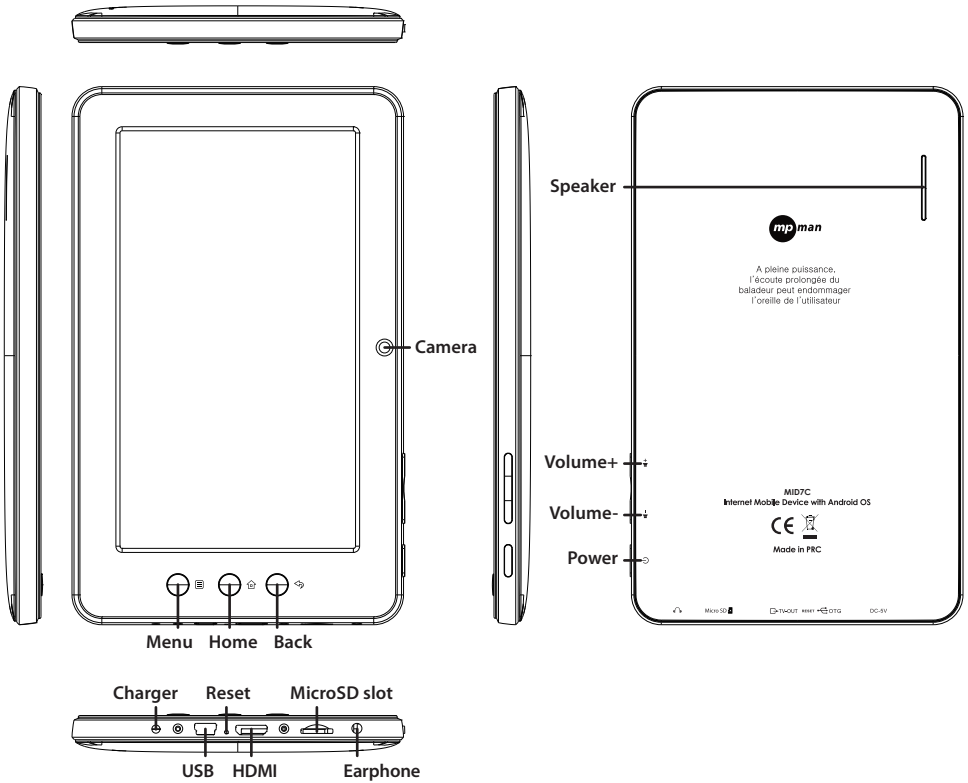

Important Notice

- If the device is freezing or stuck, press the reset button(a small hole).
- When the performance is slow after using some applications, it is recommended to close running application in setting menu.

Caution

- For charging, be sure to use the power adapter(DC5V) that is provided in the package, otherwise, the device may be damaged and does not work.
- The device is equipped with high performance processor. It may heat in case of using long or while charging.

1. Power On/Off

Long press power button to turn on/off the device. It may take a minute to boot the device.
Short press power button to turn on/off the screen.(Standby mode. Refer to 3. below)

2. Desktop

After turning on the device, desktop displays with shortcut icons and arrow panel at the right side

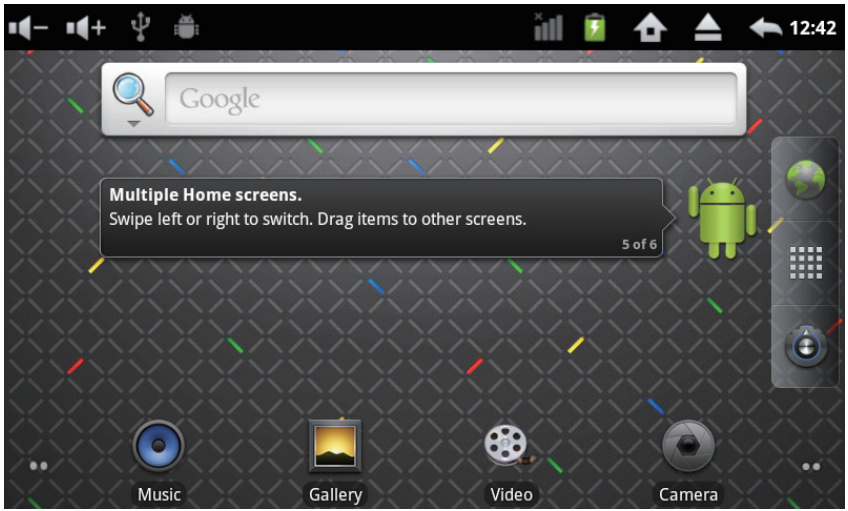

3. Standby mode(Screen off mode) / Unlock the screen

Short press the power button to turn on/off the screen (standby mode on/off).
After standby mode off, slide the lock icon to the speaker icon in order to unlock the screen.

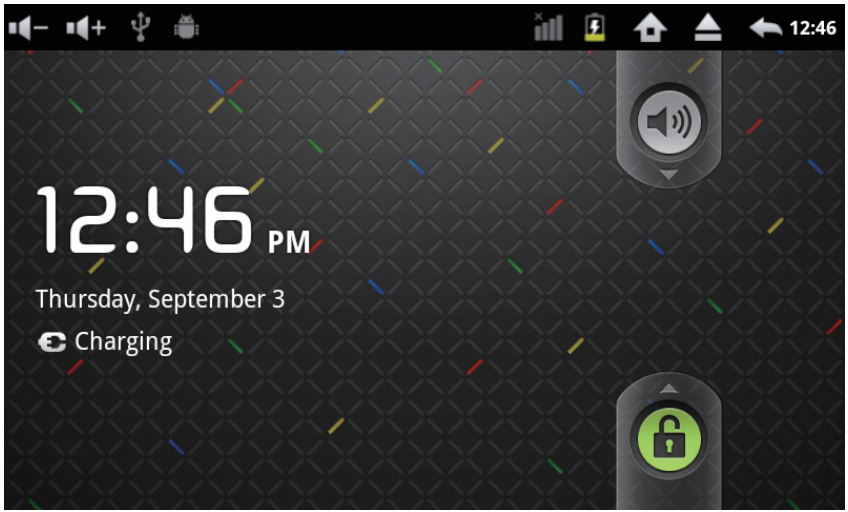

4. System settings

On the desktop, press menu button and select Settings.

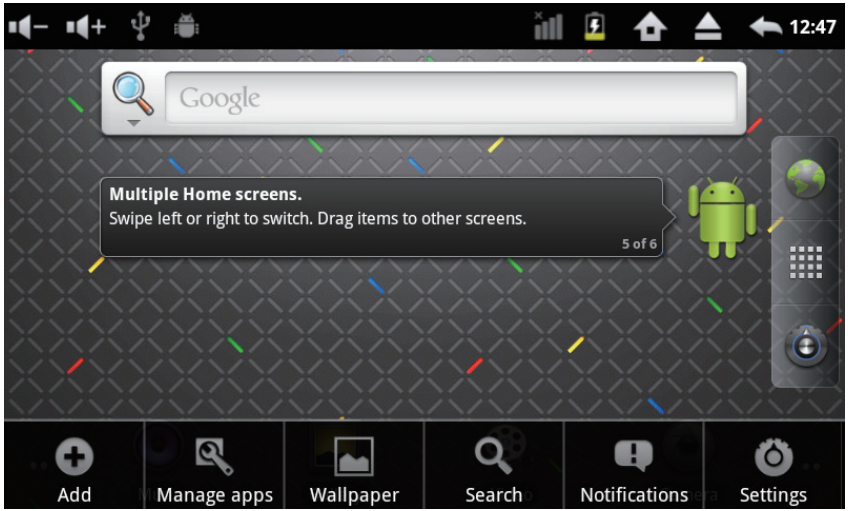

Press Settings

1.Wireless & networks

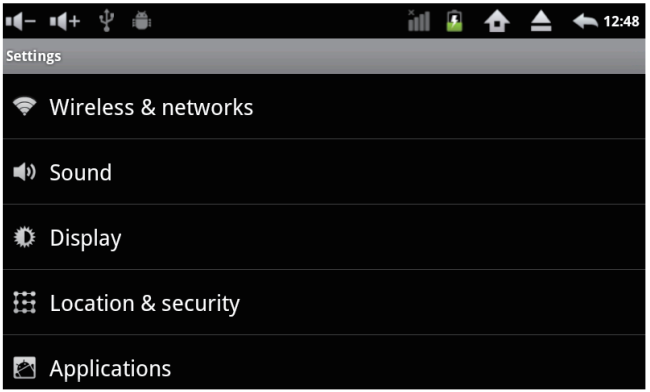

Wi-Fi – Press Wi-Fi to turn on/off
Wi-Fi settings - Press Wi-Fi settings, press Network notification, then the device will automatically search the available Wi-Fi signals.
Select the network you want to connect with.

2. Sound & display

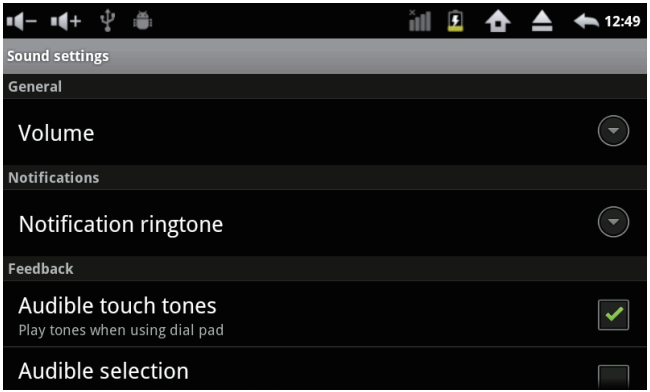

Set up each setting as you like.

3. Location & security

Use wireless networks – Location determined by Wi-Fi and/or mobile networks
Set up screen lock – Protect your device from unauthorized use by creating a personal screen unlock pattern.
Visible passwords – Show password as you type.
Install from TF card – Install encrypted certificates from TF card.
Set password – Set or change the credential storage password.

4. Applications

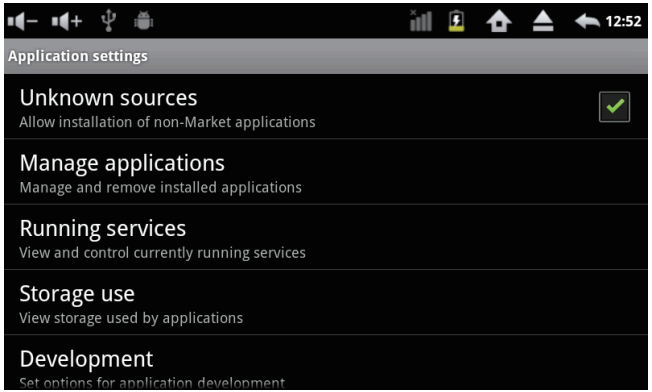

Unknown sources
If you want to allow installation of non-Market Applications, Press Unknown sources and presses OK.

Manage applications

All installed application are listing.

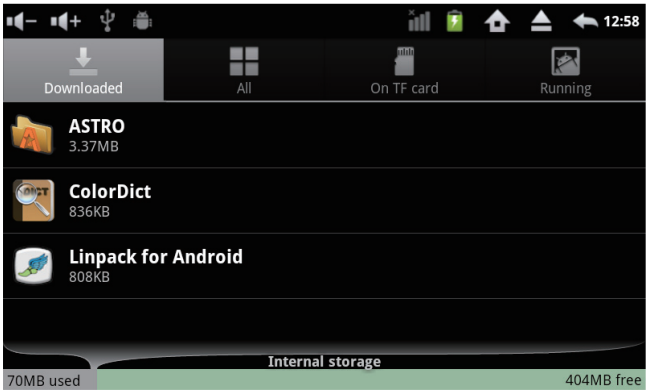

Keep pressing an application to manage.
Press Uninstall to uninstall the selected application.

Running services

View and control currently running services.

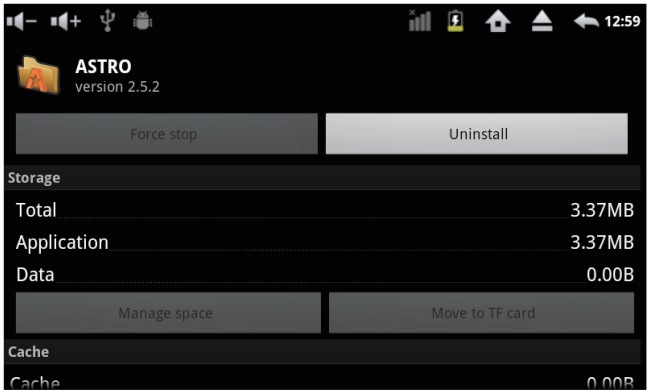

Storage use

View storage used by applications

Development

Set options for application development

5. Account & sync

Create your Gmail account. After connecting Wi-Fi network, the Gmail e-mailing system synchronizes your Gmail account with the device. Emails are automatically downloaded into the device.

6. Storage

Check device memory and microSD card status.
Unmount SD card – Unmount the SD card for safe removal.

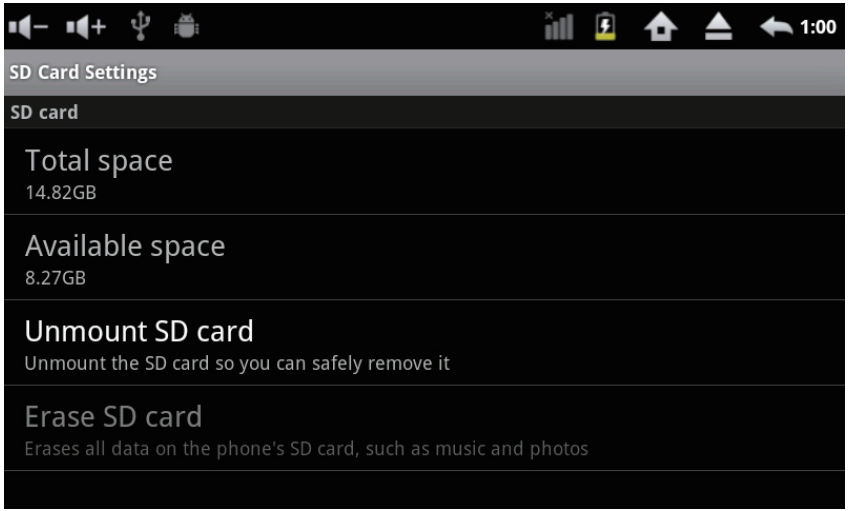

7. Language & keyboard

Select Language – Choose your preferable language.
Android keyboard – Android keyboard settings
On keyboard settings, select Input method and keyboard type.
If you need other languages besides English on keyboard, press the relevant keyboard and enter the chosen Keyboard settings, select Keyboards, press the language you need.

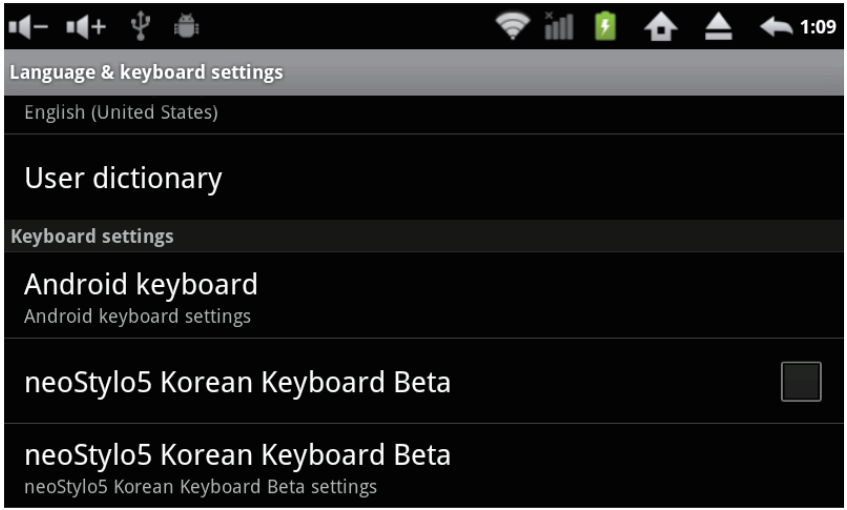

8. Date & time

Set date
Select time zone
Set time
Use 24-hour format
Select date format

9. About device

System updates – Check for system updates
Legal information

How to connect/disconnect the device with/from the computer

On main desktop, connect the device with the PC, pull down the status bar on the top of desktop

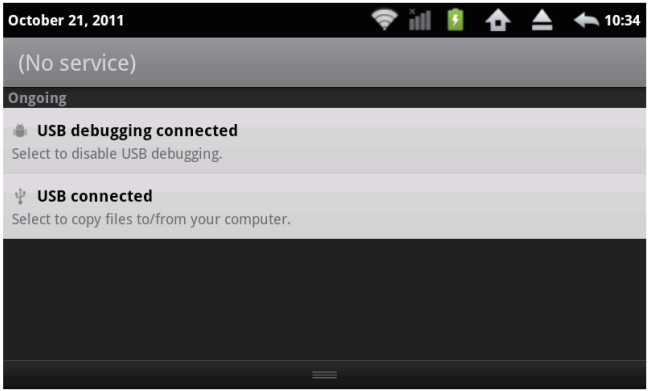

Press “USB connected”, select “Turn on USB storage”.
The device is recognized at Explorer of the computer.
Now you can use it as an external storage.

After finishing your work,
Press “Turn off USB storage” to unmount it.

How to install Applications(.apk file) into the device

Method 1.

1. Connect the device with internet. See above [1.Wireless & networks] in order to connect internet.
2. Run “Market” and search the applications you want to install.
3. Follow the instruction on the screen for installation.

Method 2.

1. With your computer, search application file(.apk) that you want to install into the device.
2. Download the file(.apk) into your computer.
3. Connect the device with your computer.
   See above [How to connect/disconnect the device with/from the computer.]
4. Copy and paste .apk file into the device and disconnect it from your computer.
5. Run “ES File Explorer” and find .apk file that was copied into the device.
6. Press the file to install and follow the instruction on the screen.

Note

You may only download adult applications if you are at least 18 years of age, or at least the age of majority in the jurisdiction where you reside or from which you download adult applications. If you do not meet these requirements, then you do not have permission to download adult applications.
In case of any problems including legal issues from the breach by end-user’s own decision, the manufacturer shall not be responsible.

How to make desktop icons

Long press the blank part of desktop, the pop-up displays.

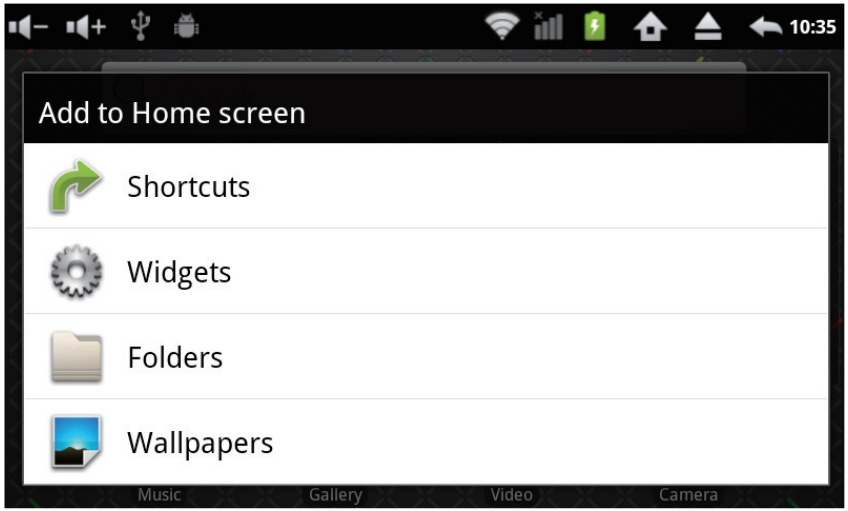

Shortcuts

Press Shortcuts and press Applications. Press your desired APK icon to put it on the desktop.

Widgets

Press Widgets and press your desired icon to put it on the desktop.

Folders
Press Folders and press New folder to create a new folder on the desktop.

Wallpaper
Press Wallpaper and select one of categories of wallpaper.
Select one you desire and press Set wallpaper.

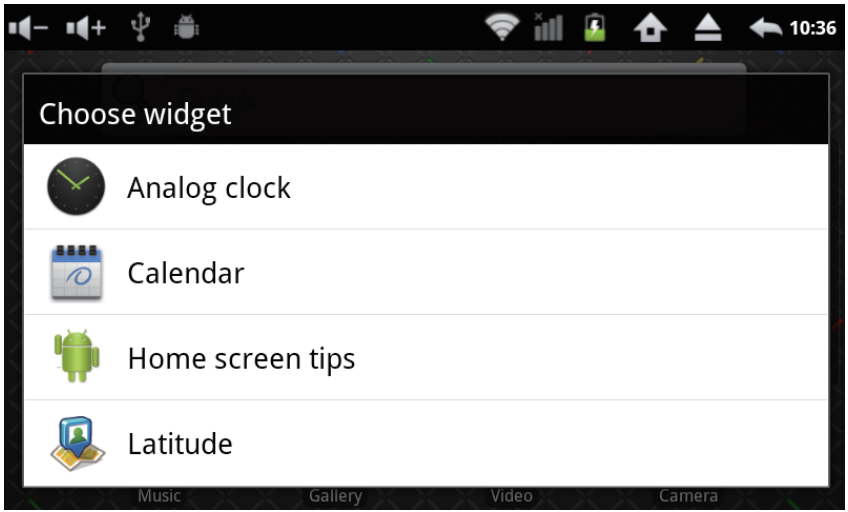

Change Input Method

If your device was installed with other more input method, long press Quick Search Box, and the pop-up displays.

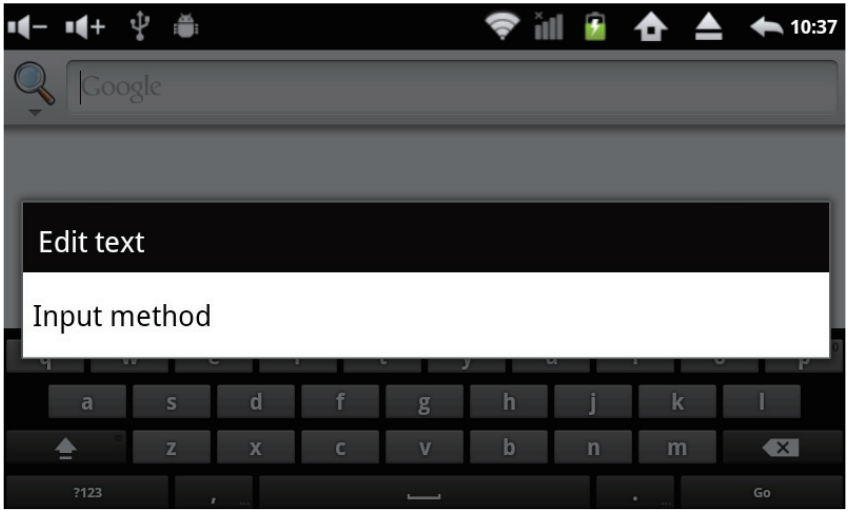

Press Input method and select the installed keyboard,
then the keyboard will appear with your desired language you installed.

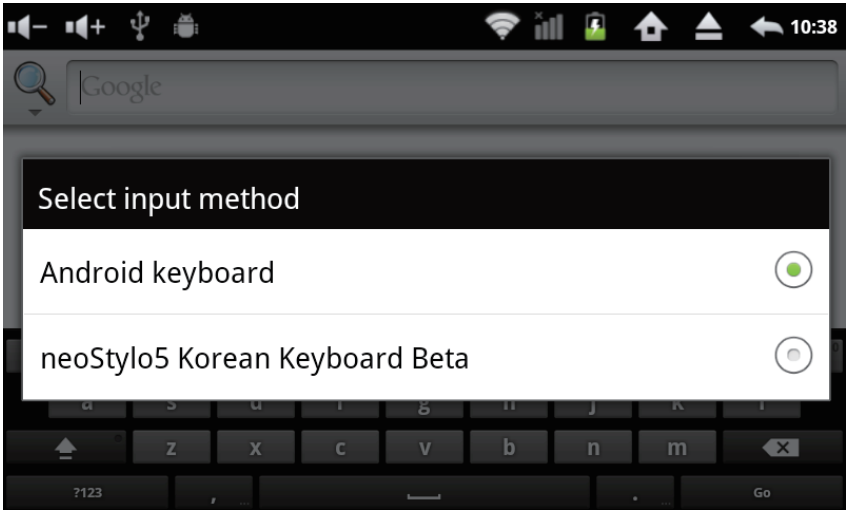

Specification

OS		Android 2.3 Ginger Bread
CPU		Telechips 8902 ARM processor
SDRAM		DDR2 256MB (3D accelerator possible for 4D games)
Display		7" TFT 800*480 Capacitive touch panel
Multi-touch screen		Yes : 2 point multi-touch
Built-in flash memory		2 / 4 / 8 / 16GB
IO PORTS	Audio port	3.5ø earphones
	USB port	1 x 5pin mini USB port (support USB host and OTG)
	DC port	5V, 2A
	HDMI port	Yes
	Micro SD	Micro SD card
	OTG port	Same with USB port
	Button	Power, VOL-, VOL+, reset, 3 android function key
Speaker		1.5W, Frequency response : 20Hz – 20k Hz, N/S : >85%
G-sensor		Yes
Camera		0.3M pixel (front)
Wi-Fi		802.11b/g/n
Power		Adaptor 5V -2A
Battery		3.7V 3500mAh Li-Polymer
Dimension		124 x 192 x 12.8mm
Charging time	by charger	approx. 3~4hours

For more information please check our website

www.mpmaneurope.com

A pleine puissance, l'écoute prolongée du baladeur peut endommager l'oreille de l'utilisateur